

4.0 端子拆卸工具使用说明

4.0 Terminal Removal Tool Instructions



- 一：使用范围
- 一：Range of application

- 1：本说明适用于以下产品与工具。
- 1：This instructions applies to the following products and tools.

产品型号 Product Number		工具编号 Tool Number
PL082(X)-6(1)-XX(2/4/6/10)	PL084(X)-6(1)-XX(2/4/6/10)	ATPIW-T-011
PL463(X)-40-12G-DQ PL482(X)-60-8G-2-DQ PL183(X)-4(1)-X(2/4/6/10)	PL482(X)-60-6G-2-DQ PL182(X)-6(1)-XX(2/4/6/10)-2	C-A-098
PL082(X)-6(1)-XX(2/4/6/10)-2	PL083(X)-4(1)-X(2/4/6/10)	ATPIW-T-014

- 二：拆卸步骤
- 二：Remove Step

- 步骤1：拆开接头后盖，插座不需要此步骤。
- Step1：Remove the rear cover of the connector. This step is not required for the socket.



- 步骤2：将工具从接头前端套入端子，转动工具使其到达端子底部。
- Step2：Slip the tool into the terminal from the front end of the connector and turn the tool to reach the bottom of the terminal.



- 步骤3：左手握住接头，右手将手柄下压将端子推出。
- Step3：Hold the connector with your left hand and push the terminal out by pressing down on the handle with your right hand.



步骤4：重复以上步骤，将其它PIN位端子顶出。

Step4：Repeat the preceding steps to push out the other PIN terminals.


步骤5：分别握住接头与线材，将端子从接头中退出。

Step5：Hold the connector and wire separately and pull the terminal out of the connector.




步骤6：取出的接头作报废处理，不可以再次使用，除非更换胶壳。

Step6：The connector taken out is scrapped and can not be used again unless the housing is replaced.

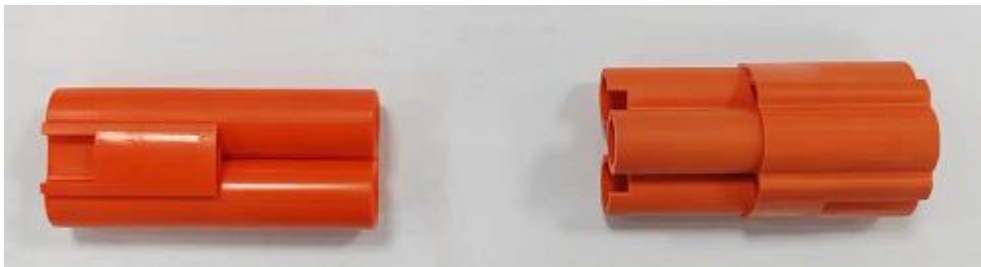

步骤7：取出的端子需更换卡簧才可再次使用。

Step7：The removed terminal can be used again only after the spring is replaced.

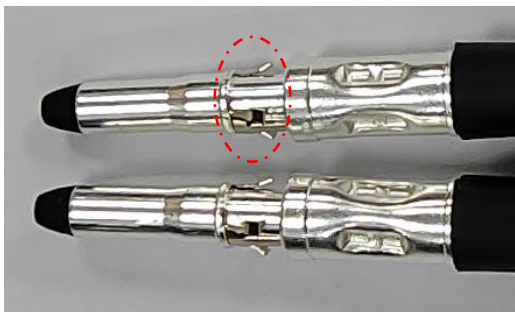

版本记录 Revision history

序号 Number	变更内容 Content of change	日期 Date
01	新出 New issue	20221108
02	增加工具 ATPIW-T-014 Added tool ATPIW-T-014	20230815